


Uberti 1858 Remington Spare Parts **Henry Krank**

Individual Spare Parts

Parts 1601-1U - Frame (Part 1), 1601-2U - Barrel (Part 2), and 1601-3U - Cylinder (Part 3) require a variation and can only be ordered over the phone, please contact us on 01132 569163 to order any of the aforementioned parts. For all other parts please order online.

Spare Part Packs

Packs containing a set of spare parts for your gun are available to view and order online at www.henrykrank.com

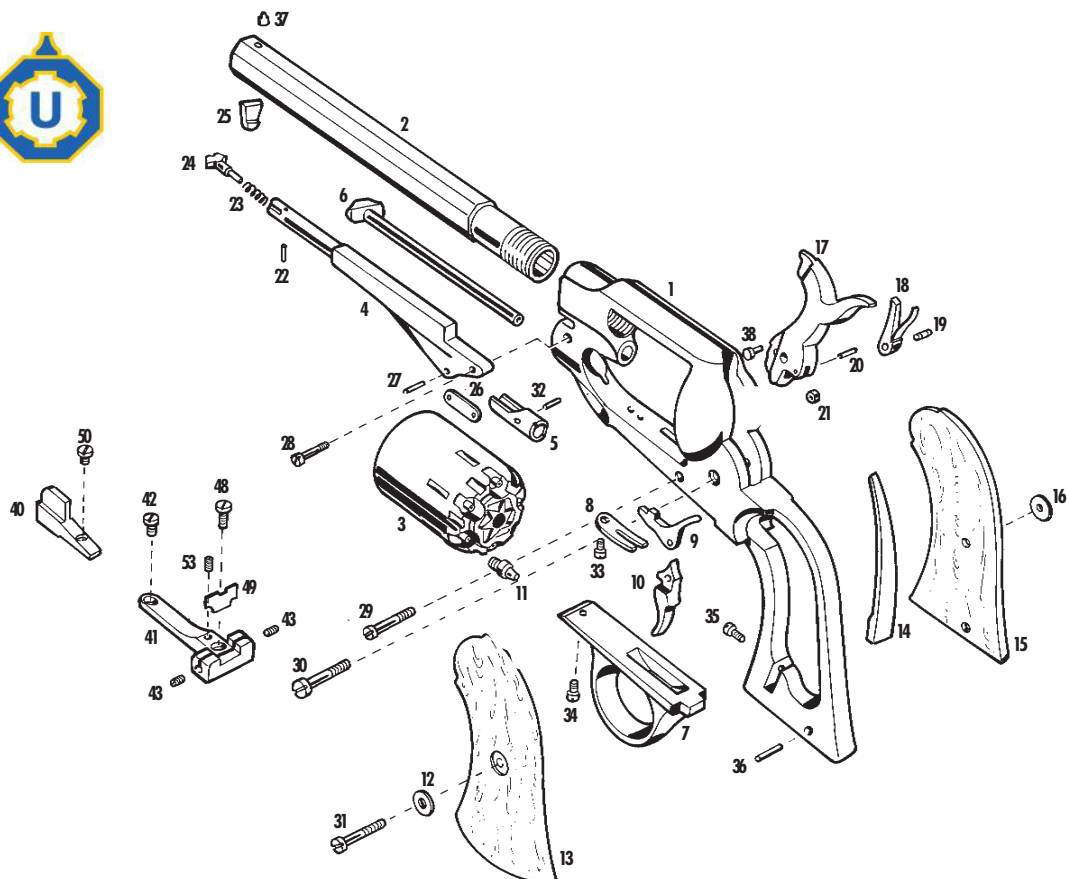

Product	Part	Name	Product	Part	Name
1601-1U	Part 1	Frame	1601-25U	Part 25	Loading Lever Retainer
1601-2U	Part 2	Barrel	1601-26U	Part 26	Link
1601-3U	Part 3	Cylinder	1601-27U	Part 27	Link Pin
1601-4U	Part 4	Loading Lever	1601-28U	Part 28	Loading Lever Screw
1601-5U	Part 5	Bullet Rammer	1601-29U	Part 29	Trigger and Cylinder Stop Screw
1601-6U	Part 6	Cylinder Pin	1601-30U	Part 30	Hammer Screw
1601-7U	Part 7	Trigger Guard	1601-31U	Part 31	Grip Screw
1601-8U	Part 8	Trigger and Cylinder Stop Spring	1601-32U	Part 32	Rear Hammer Pin
1601-9U	Part 9	Cylinder Stop	1601-33U	Part 33	Spring Retainer Screw
1601-10U	Part 10	Trigger	1601-34U	Part 34	Trigger Guard Screw
1601-12U	Part 12	Grip Nut	1601-35U	Part 35	Main Spring Screw
1601-13U	Part 13	Left Grip	1601-36U	Part 36	Grip Pin
1601-14U	Part 14	Mainspring	1601-37U	Part 37	Sight
1601-15U	Part 15	Right Grip	1601-40U	Part 40	Front Sight Blade
1601-16U	Part 16	Grip Nut	1601-41U	Part 41	Adjustable Rear Sight Base
1601-17U	Part 17	Hammer	1601-42U	Part 42	Adj. Rear Sight Base Front Screw
1601-18U	Part 18	Hand	1601-43U	Part 43	Blade Adjusting Screw
1601-19U	Part 19	Hand Screw	1601-48U	Part 48	Rear Screw
1601-20U	Part 20	Roller Pin	1601-49U	Part 49	Sight Blade
1601-21U	Part 21	Roller	1601-50U	Part 50	Front Sight Blade Screw
1601-22U	Part 22	Catch Pin	1601-53U	Part 53	Grub Screw
1601-23U	Part 23	Catch Spring			
1601-24U	Part 24	Loading Lever Catch			