



Uberti 1873 S.A.A Spare Parts List **Henry Krank**

Individual Spare Parts

Parts 1599-1U - Frame Assembly (Part 1), 1599-3U - Barrel (Part 3), and 1599-5U - Cylinder (Part 5) require a variation and can only be ordered over the phone, please contact us on 01132 569163 to order any of the aforementioned parts. For all other parts please order online.

Spare Part Packs

Packs containing a set of spare parts for your gun are available to view and order online at www.henrykrank.com

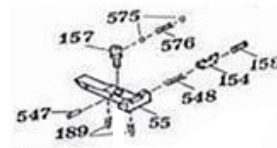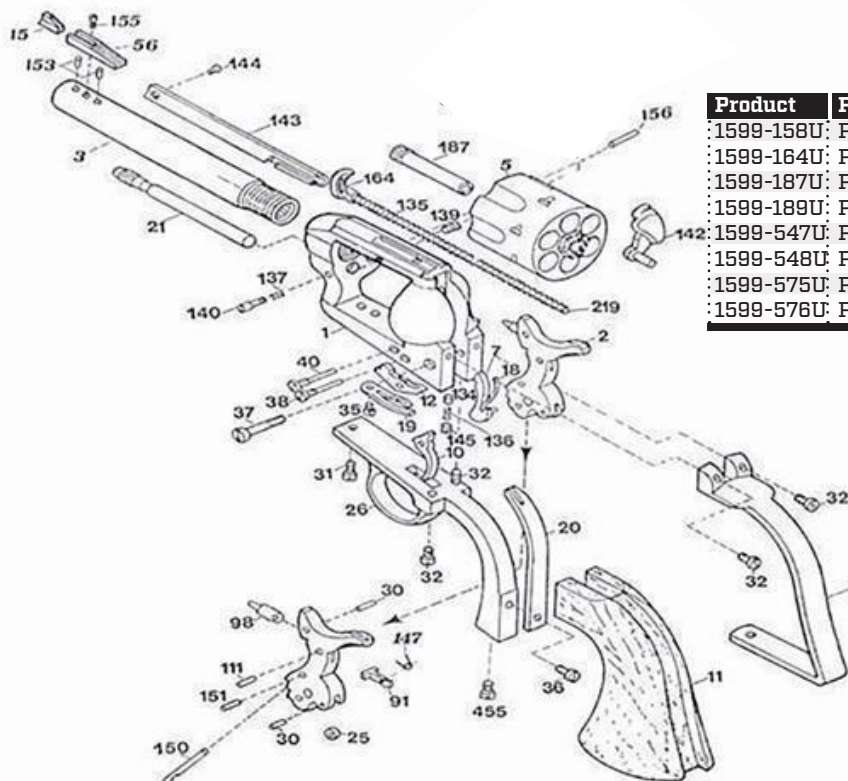

Product	Part	Name
1599-158U	Part 158	Rear Sight Screw
1599-164U	Part 164	Ejector
1599-187U	Part 187	Base Pin Bushing
1599-189U	Part 189	Rear Sight Spring
1599-547U	Part 547	Rear Sight Elevation Pin
1599-548U	Part 548	Rear Sight Blade Spring
1599-575U	Part 575	Rear Sight Sphere
1599-576U	Part 576	Rear Sight Sphere Spring

Product	Part	Name
1599-1U	Part 1	Frame Assembly
1599-2U	Part 2	Hammer Assembly
1599-3U	Part 3	Barrel
1599-5U	Part 5	Cylinder
1599-7AU	Part 7	Hand (No spring)
1599-7BU	Part 7	Hand (Large Spiggot)
1599-7CU	Part 7	Hand (Small Spiggot)
1599-8U	Part 8	Backstrap
1599-10U	Part 10	Trigger
1599-11U	Part 11	Polished Grip
1599-12U	Part 12	Bolt
1599-15U	Part 15	Sight
1599-19U	Part 19	Trigger Bolt Spring
1599-20U	Part 20	Main Spring
1599-21U	Part 21	Base Pin
1599-26U	Part 26	Triggerguard
1599-30U	Part 30	Hammer Pin
1599-31U	Part 31	Triggerguard Screw
1599-32U	Part 32	Backstrap and T'guard Screw
1599-35U	Part 35	Bolt Spring Screw
1599-36U	Part 36	Main Spring Screw
1599-37U	Part 37	Hammer Screw
1599-38U	Part 38	Trigger Screw

Product	Part	Name
1599-40U	Part 40	Bolt Screw
1599-55U	Part 55	Rear Sight Base
1599-56U	Part 56	Front Sight Ramp
1599-91U	Part 91	Hammer Safety Bar
1599-98U	Part 98	Firing Pin
1599-111U	Part 111	Hammer Safety Bar Pin
1599-134U	Part 134	Gate Catch
1599-135U	Part 135	Ejector Spring
1599-136U	Part 136	Gate Spring
1599-137U	Part 137	Base Pin Spring
1599-139U	Part 139	Base Pin Nut
1599-140U	Part 140	Base Pin Screw
1599-142U	Part 142	Gate
1599-143U	Part 143	Ejector Rod Tube
1599-144U	Part 144	Ejector Rod Tube Screw
1599-145U	Part 145	Gate Catch Screw
1599-147U	Part 147	Hammer Safety Spring
1599-150U	Part 150	Hammer Safety Plunger
1599-151U	Part 151	Hammer Safety Spring Pin
1599-153U	Part 153	Sight Pin
1599-154U	Part 154	Rear Sight Blade
1599-155U	Part 155	Front Sight Ramp Screw
1599-157U	Part 157	Rear Sight Elevation Screw