

## AUTO-INDEX HEX RATCHETS

### 

# LEE PRECISION, INC HARTFORD, WISCONSIN 53027 U.S.A.

#### INSTRUCTIONS

- 1) Remove shell plate carrier from press.
- Remove the two screws holding the gear plate to carrier.
- 3) In the center of the hex adjusting ratchet, you will find the auto-index hex ratchet. Remove the damaged or worn out ratchet and replace, make sure the teeth engage the ratchet gear.
- 4) Replace gear plate and secure two screws.

### WWW.LEEPRECISION.COM