

## INSTRUCTIONS



**GO** end is identified by a groove.

**Insert “GO” plug gauge into primer pocket, if it does not enter, crimp must be removed.**


**If the “GO” gauge fits very loosely, reverse and verify with the “NO-GO” end. If the “NO-GO” enters to the bottom of the primer pocket, the primer pocket is oversized and will not reliably retain all primers.**

**Swaging is the fastest and easiest way to remove crimps and restore proper dimensions. The Lee Ram Swage works in all basic reloading presses. The APP Swage pairs with the Lee APP series presses and is the fastest way to swage primer pockets on the planet.**

**LEE Ram Swage  
#91617**



**LEE  
APP  
Swage  
#90237**

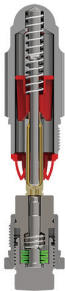

**LEE PRECISION, INC.**  
HARTFORD, WISCONSIN 53027 U.S.A.  
[www.leeprecision.com](http://www.leeprecision.com)



# LEE

92104



7 34307 92104 0

## SMALL & LARGE PRIMER POCKET GAUGE

**Gauges to assure your brass meets the demanding  
SAAMI specifications for primer pocket dimensions**



**WARNING:** This product may contain steel alloyed with trace amounts of lead and other elements which are known to the State of California to cause reproductive harm and cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). To prevent exposure, do not alter the product by welding, grinding, etc.